



# User's Manual


## eViewer

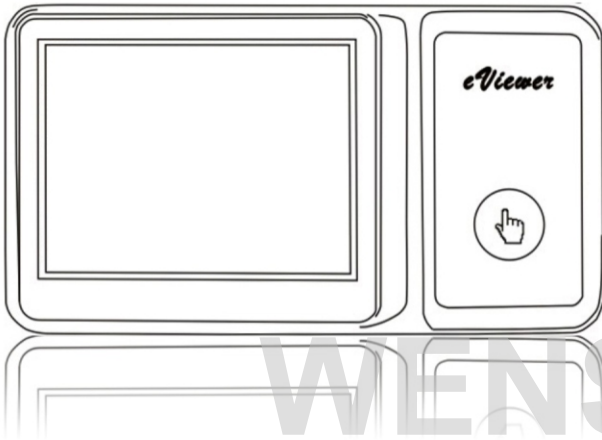

### Appearance and Dimensions

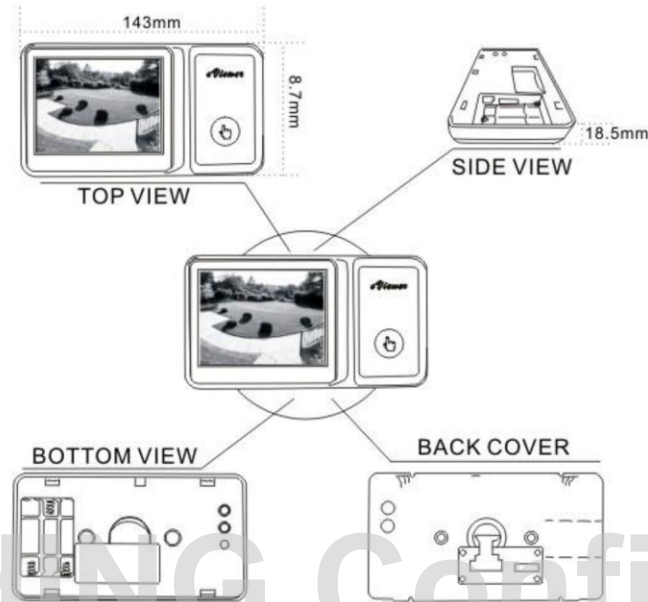

### Function Keys

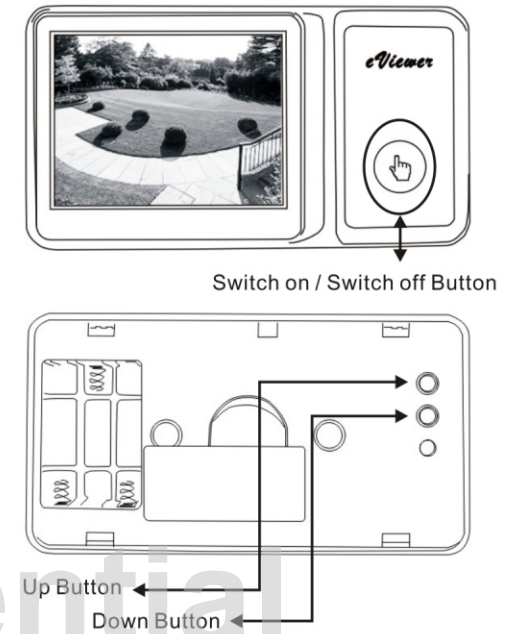

### Specification


- Display : 3.5" color TFT LCD (320 x 240 pixels)
- Sensor : 300K pixels
- Recording Format : AVI Motion JPEG(MPEG)
- Resolution : 320 x 240 @ 30fps maximum
- Language Support : English
- Memory : Support for a 4G Micro SD card
- Batteries : 3pcs AAA 1.5VDC Alkaline batteries
- Physical Dimensions : eViewer 143 x 87 x 18.5mm
- Connecting Pipe : Diameter 14mm;  
length 35~55mm
- Temperature : Operates between 0 ~ 40 Degree Celsius
- Humidity : Operates 15%~80%;  
Storage 15%~80%

### Method of Operation

#### Turn on

- Press the button until the device is turned on. Firmware version will be display on the screen, then it will start recording.
- After recording is finished, the file will be saved in Micro SD card automatically. Data is saved using CDVR system. Contents are saved and file is saved and named under "date & time".  
When the capacity of Micro SD card is below 100M, recurring record signal will appear on the screen; when the capacity is below 50M, the device will delete the earliest file and start recording again.
- If Micro SD card is not inserted in the device when it is turned on, "Insert SD Card" message will be shown on the screen.
- If Camera sensor is not installed on the device, "Please Check Sensor" message will be shown on the screen, and then the device will shut off automatically.


#### Display Area

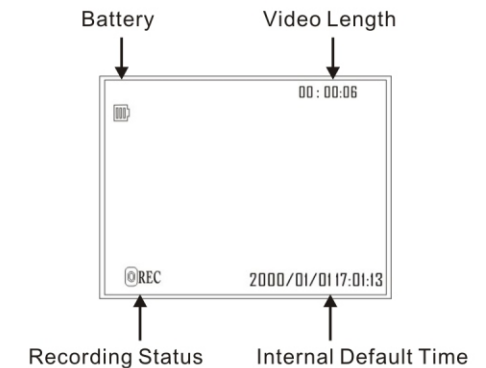

#### Turn Off


- After user released the button, the system will store the files and turn off automatically within 3 seconds.

## Date and Time Setting


- Press and Hold Up button and press the  button simultaneously, the device will enter into the Date Setting menu.
- User may release both button and start date and time setting. Use the Up / Down button to change the date and time settings. There are five items in the following order: Year, Month, Date, Hour, and Minute. If user does not press Up / Down button within 3 seconds, the system will move on to the next item.
- After user sets the date and time, the device will turn off automatically.
- Users may set the date and time even though camera sensor is not installed on the device.

## Installation Guide



- Place the Back Cover and insert into peep hole on the door

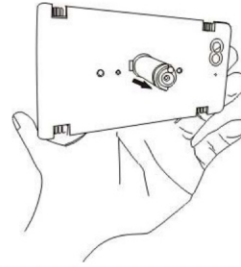


- Screw to secure the back cover

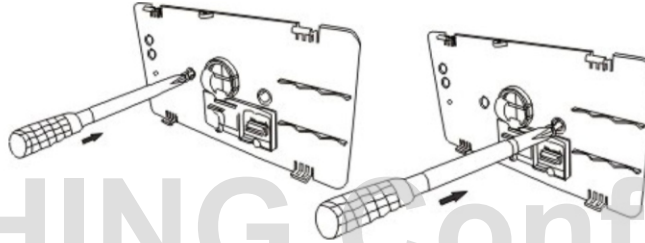


- Insert tube and turn counter clockwise

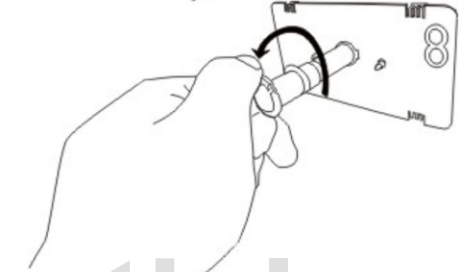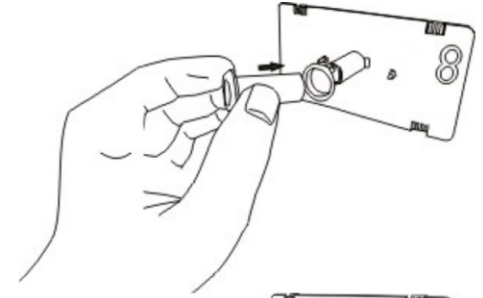


- Near the end of the turn, remove the tube gently

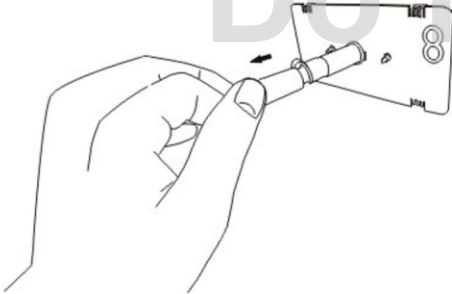

- Continue to turn counter clockwise to tighten

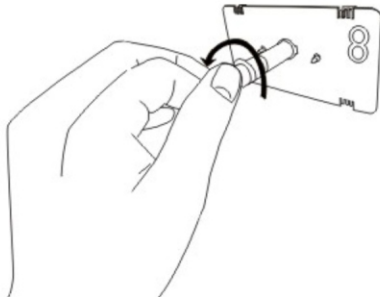


- Use the tool provided in the kit to tighten the lens

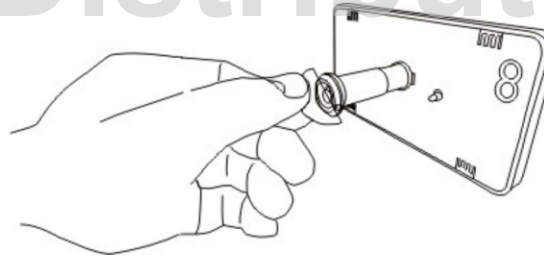

- Lock with Screw for security



- Insert the batteries on main unit and place onto the back cover

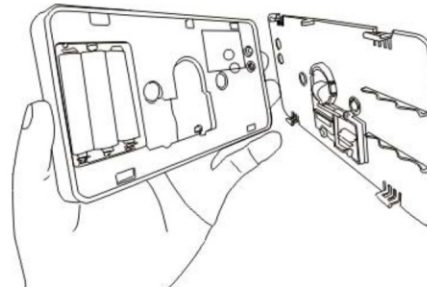

- After installation is complete, test the screen to see if it appears normal.



WENSHING Confidential

Do Not Distribution